

# PIANOBOX PRO 取扱説明書


この度は Miditech PIANOBOX PRO をお買い上げいただき誠にありがとうございます。

PIANOBOX PRO は GM マップと同様の 128 音色に加え、高音質 E-MU-8030 音色を 64 音色搭載した 16 マルチティンバー音源モジュールです。

USB 接続による MIDI インターフェース機能を搭載しており、コンピューターと接続して DTM 音源として使用できるほか、MIDI ケーブルで接続すればライブキーボードの拡張音源としても使用可能です。

また、100 種類のリズムパターンを奏でるリズムマシン機能も搭載。ライブにも音楽制作にも便利なハイクオリティ音源モジュールです。

## 各部の名称と機能

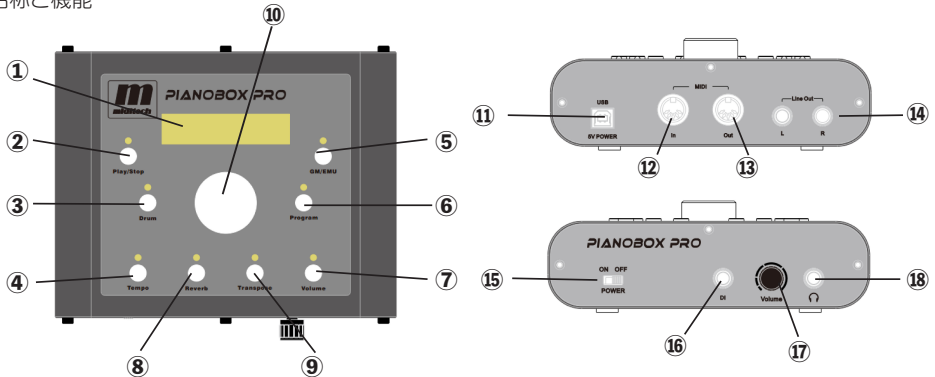

- LCD ディスプレイ**  
音色番号やボリュームの値など、PIANOBOX PRO の状態を表示するディスプレイです。
- Play/Stop ボタン**  
内蔵のドラムパターンを再生 / 停止するボタンです。
- Drum ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、ドラムパターンを切り換えることができます。パターン番号とリズムの関係はドラムパターンリストを参照してください。
- Tempo ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、ドラムパターンのテンポを変更できます。テンポの値は①の LCD ディスプレイに表示されます。
- GM/EMU ボタン**  
PIANOBOX の音色マップを GM にするか E-MU にするかを切り換えるボタンです。
- Program ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、音色を切り換えることができます。音色番号と音色の関係は、⑤で GM を選択しているときは GM 音色マップを、EMU を選択しているときは E-MU 音色マップを参照してください。
- Volume ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、音源の音量を変更することができます。⑦の Volume ツマミは PIANOBOX 全体の音量（ダイレクトインプットの音量も含む）ですが、こちらは内蔵音源の音量を調整します。
- Reverb ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、リバーブの深さを調整することができます。
- Transpose ボタン**  
このボタンを押してから⑩のデータエンコーダーを回すと、PIANOBOX が発音する音をトランスポーズすることができます。
- データエンコーダー**  
各ボタンを押したときのパラメーター値を変更するためのエンコーダーです。
- USB 端子（電源供給兼用）**  
コンピューターと USB ケーブルで接続することで、MIDI インター

- フェースとして機能し、PIANOBOX の音を DAW などからコントロールすることができます。クラスコンプライアンスに対応しており、特にドライバソフトをインストールする必要はありません。また、コンピューターと接続中はバス電源で動作します。コンピューターと接続せずに PIANOBOX 単体で使用する場合は、付属のアダプターと USB ケーブルで接続して電源を供給して下さい。**
- MIDI IN 端子**  
MIDI イン端子です。キーボードなどの MIDI アウト端子と接続することで、PIANOBOX を音源モジュールとして使用することができます。
- MIDI OUT 端子**  
MIDI アウト端子です。コンピューターと USB 接続した際に、コンピューターからの MIDI 信号を出力できます。
- Line Out 端子（ステレオ）**  
PIANOBOX の音を出力する端子です。ミキサーやキーボードアンプなどに接続してください。
- POWER スイッチ**  
電源スイッチです。PIANOBOX を使用するときは ON にして下さい。
- ダイレクトインプット**  
ステレオの入力端子です。6.3mm ステレオ標準プラグで、プレーヤーなどを接続すると、PIANOBOX の音とミックスされて Line Out 端子から出力されます。
- Volume ツマミ**  
Line Out 端子およびヘッドフォン端子の音量を調整するツマミです。
- ヘッドフォン端子**  
ステレオのヘッドフォン端子です。6.3mm 標準プラグのヘッドフォンを接続してお使い下さい。

## その他のファンクション

- ③の Drum ボタンを 3 秒長押しすると、PIANOBOX PRO の現在の状態を保存することができます。
- ⑥の Program ボタンを 5 秒長押しすると、PIANOBOX PRO の設定をリセットすることができます。

## ー GM 音色マップー

1	Piano 1	33	Acoustic Bass	65	Soprano Sax	97	Fx 1(rain)
2	Piano 2	34	Fingered Bass	66	Alto Sax	98	Fx 2 (soundtrack)
3	Piano 3	35	Picked Bass	67	Tenor Sax	99	Fx 3 (crystal)
4	Honky Tonk	36	Fretless Bass	68	Baritone Sax	100	Fx 4 (atmosphere)
5	E.Piano 1	37	Slap Bass 1	69	Oboe	101	Fx 5 (brightness)
6	E.Piano 2	38	Slap Bass 2	70	English Horn	102	Fx 6 (goblins)
7	Harpsichord	39	Synth Bass 1	71	Bossoon	103	Fx 7 (echoes)
8	Clavinet GM	40	Synth Bass 2	72	Clarinet	104	Fx 8 (sci-f)
9	Celesta	41	Violin	73	Piccolo	105	Sitar
10	Glockenspiel	42	Viola	74	Flute	106	Banjo
11	Music Box	43	Cello	75	Recorder	107	Shamisen
12	Vibraphone	44	Contrabass	76	Pan Flute	108	Koto
13	Marimba	45	Tremolo Strings	77	Blown Bottle	109	Kalimba
14	Xylophone	46	Pizzicato	78	Shakuhachi	110	Bag Pipe
15	Tubular Bells	47	Harp	79	Whistle	111	Fiddle
16	Dulcimer	48	Timpani	80	Ocarina	112	Shanai
17	Organ 1	49	Strings	81	Lead 1 (square)	113	Tinkle Bell
18	Organ 2	50	Slow Strings	82	Lead 2 (sawtooth)	114	Agogo
19	Organ 3	51	Synth Strings 1	83	Lead 3 (callopo)	115	Steel Drums
20	Church Organ	52	Synth Strings 2	84	Lead 4 (chiff)	116	Woodblock
21	Reed Organ	53	Choir Aahs	85	Lead 5 (charang)	117	Taiko
22	Accordion	54	Voice Oohs	86	Lead 6 (voice)	118	Melodic Drum
23	Harmonica	55	Synth Vox	87	Lead 7 (fifths)	119	Synth Trm
24	Bandoneon	56	Orchestra Hit	88	Lead 8 (bass+lead)	120	Reverse Cymbal
25	Nylon Guitar	57	Trumpet	89	Pad 1 (new age)	121	Guitar Fret Noise
26	Steel Guitar	58	Trombone	90	Pad 2 (warm)	122	Breath Noise
27	Jazz Guitar	59	Tuba	91	Pad 3 (polysynth)	123	Seashore
28	Clean Guitar	60	Mute Trumpet	92	Pad 4 (choir)	124	bird Tweet
29	Guitar Mutes	61	French Horns	93	Pad 5 (bowed)	125	Telephone Ring
30	Overdrive Guitar	62	Brass	94	Pad 6 (metallic)	126	Helicopter
31	Distortion Guitar	63	Synth Brass 1	95	Pad 7 (halo)	127	Applause
32	Guitar Harmonics	64	Synth Brass 2	96	Pad 8 (sweep)	128	Gunshot

## ー E-MU 音色マップー

1	Grand Piano	17	Honky Tonk	33	CP-70 & String & Dyno	49	CP-70 & Rhodes
2	Rhodes Electric Piano	18	Dyno Rhodes	34	Dyno & Strings	50	Dyno Piano & OBX
3	B3 2nd Perc	19	B3 Jazz	35	B3 -888 2nd & Rhodes	51	B3 Jazz & DX
4	Clavinet 1	20	CP-70	36	Clavinet1 & 2	52	All Saws
5	Prophet 10	21	Juno 60	37	Matrix & Solina	53	MegaSynth
6	String Section	22	Brass Section	38	Solina & OBX	54	OB & Saws
7	Mini Moog	23	OB Juno	39	Moog Bass	55	Prophet PWM
8	Synthesstring	24	Synth Bass/Lead	40	Saw Bass	56	Pulse Keys
9	Brite Piano	25	Piano Strings	41	CP-70 & Strings	57	Wurly & CP
10	DX Rhodes	26	Wurlitzer EP	42	DX & Rhodes	58	Wurly & Solina
11	B3 Full	27	B3 3rd Perc	43	B3 - All Drawbars Out	59	B3 888 3rd & All Drawbars Out
12	Clavinet 2	28	Pulse Piano	44	Clavinet & Pulse	60	TB303 & Clavinet
13	Matrix Synth	29	OB-Xa	45	Juno-Rogue Layer	61	SEM
14	Sax Section	30	Solina Strings	46	Rogue-OBX Layer	62	OB, Juno & B3
15	Moog Rogue	31	SEM Moog	47	Fat Mini	63	SEM, Moog & OBX
16	Slap/Horns	32	TB303/Rhodes	48	Multi Bass	64	All Saws & Squares

## ー ドラムパターンリストー

1	Ballad 01	21	Disco 02	41	Latin 02	61	Reggae 01	81	Samba 05
2	Ballad 02	22	Disco 03	42	Latin 03	62	Reggae 02	82	Samba 06
3	Ballad 03	23	Disco 04	43	Latin 04	63	Reggae 03	83	Soul 01
4	Ballad 04	24	Disco 05	44	Latin 05	64	Rock 01	84	Soul 02
5	Ballad 05	25	Disco 06	45	Latin 06	65	Rock 02	85	Soul 03
6	Ballad 06	26	Funk 01	46	Latin 07	66	Rock 03	86	Soul 04
7	Bossa 01	27	Funk 02	47	Latin 08	67	Rock 04	87	Soul 05
8	Bossa 02	28	Funk 03	48	Latin 09	68	Rock 05	88	Soul 06
9	Bossa 03	29	Groove 01	49	Pop 01	69	Rock 06	89	Soul 07
10	Bossa 04	30	Groove 02	50	Pop 02	70	Rock 07	90	Soul 08
11	Bossa 05	31	Groove 03	51	Pop 03	71	Rock 08	91	Swing 01
12	ChaCha	32	Groove 04	52	Pop 04	72	Rock 09	92	Swing 02
13	Country 01	33	Groove 05	53	Pop 05	73	Rock 10	93	Swing 03
14	Country 02	34	Groove 06	54	Pop 06	74	Rock 11	94	Swing 04
15	Country 03	35	Groove 07	55	Pop 07	75	Rock 12	95	Swing 05
16	Country 04	36	Groove 08	56	Pop 08	76	Rock 13	96	Swing 06
17	Country 05	37	Jazz 01	57	Pop 09	77	Samba 01	97	Swing 07
18	Dance 01	38	Jazz 02	58	Pop 10	78	Samba 02	98	Swing 08
19	Dance 02	39	Jazz 03	59	Pop 11	79	Samba 03	99	Waltz 01
20	Disco 01	40	Latin 01	60	Pop 12	80	Samba 04	100	Waltz 02